



BRIEF PLUS

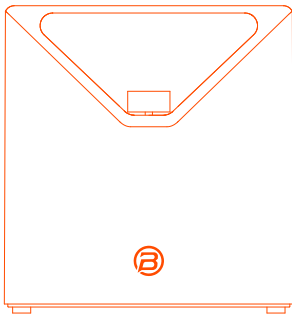

QUICK START GUIDE

REAL JAZZ MUSIC SPEAKER

CHARGE THE SPEAKER

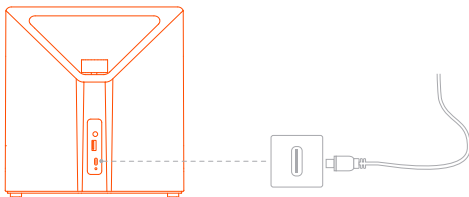



● Blinking red light

● Red light off



Don't plug the cable in when your speaker and the charging port are not completely dry. Leave your speaker in a dry area with some airflow to let the port air dry naturally.

 
POWER ON/OFF

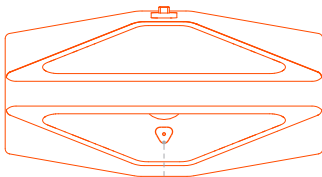

- White light on
- White light off

Press and hold the Power button for 2 seconds to power on.
Press and hold the Power button again for 2 seconds to power off.

BLUETOOTH CONNECTION

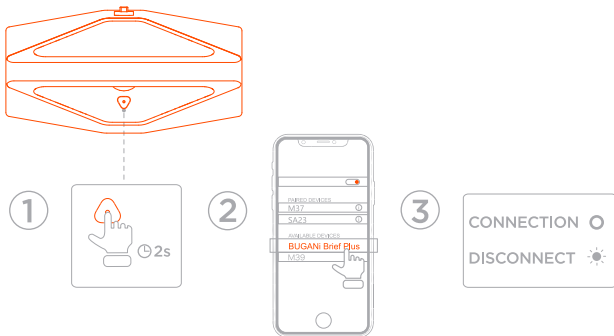


☀️ Blinking white

○ Solid white


When the speaker is turned off, press and hold the power button for 2 seconds until the white indicator blinks to enter the Bluetooth connection mode.

BLUETOOTH BROADCAST MODE

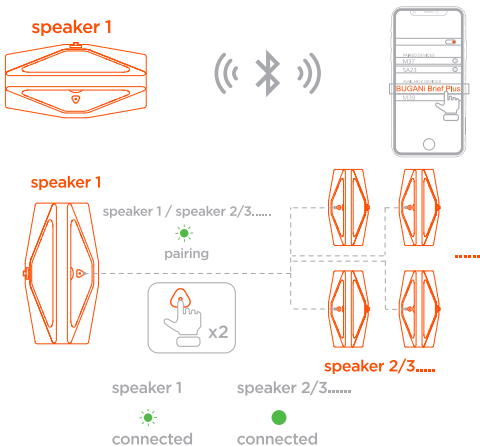


	Blinking Green	Bluetooth broadcast mode
	Blinking Green (speaker 1)	Bluetooth broadcast connected
	Solid Green (speaker 2/3...)	

AUX IN

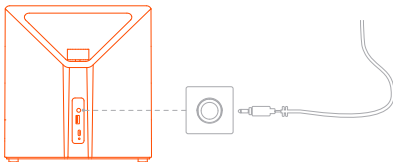

Connect a device to the AUX IN jack with an audio cable.


USB IN (AUDIO)

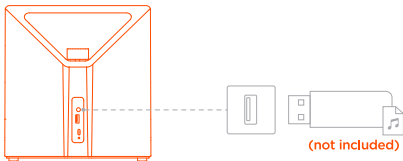

Plug a USB storage device that contains playable audio contents into the USB port of the speaker.

- The speaker switches to the USB source automatically.
- Audio playback will start automatically.

BUTTON CONTROLS

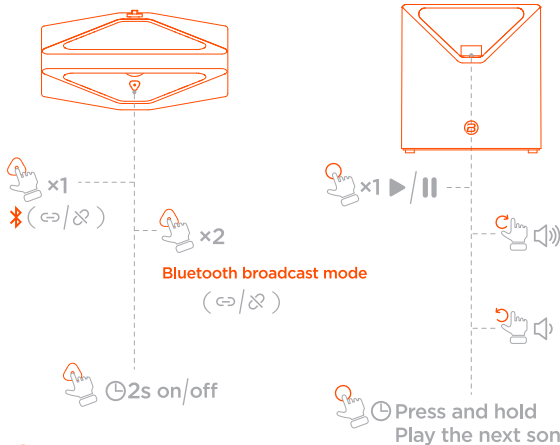

RESET

Press the reset button once.

