


BRIEF PRO

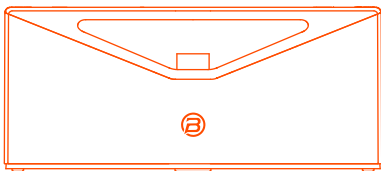

QUICK START GUIDE 

REAL JAZZ MUSIC SPEAKER

CHARGE THE SPEAKER



 
 Blinking red

 Solid red



Don't plug the cable in when your speaker and the charging port are not completely dry. Leave your speaker in a dry area with some airflow to let the port air dry naturally.

POWER ON/OFF




 White light on

 White light off

Press and hold the Power button for 2 seconds to power on.

Press and hold the Power button again for 2 seconds to power off.

BLUETOOTH CONNECTION

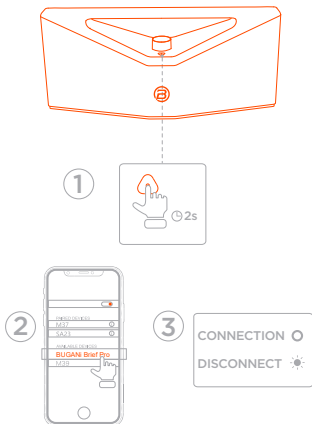


 Blinking white

 Solid white

When the speaker is turned off, press and hold the power button for 2 seconds until the white indicator blinks to enter the Bluetooth connection mode.

TWS (TRUE WIRELESS STEREO) MODE

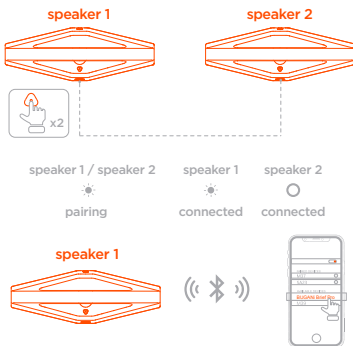


 

	Blinking white	TWS pairing
	Blinking white (speaker 1)	TWS connected
	Solid white (speaker 2)	

AUX IN

Connect a device to the AUX IN jack with an audio cable.



BUTTON CONTROLS

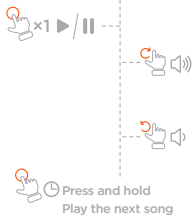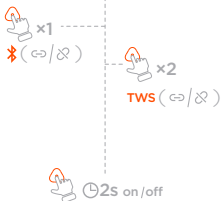

RESET

Press the reset button once.

